




WINDOW BREAKER OPERATING INSTRUCTIONS

114 Potters Lane
Port Matilda, PA 16870
www.GISquaredTech.com

1. Ensure all set screws are tight and the striking tip is securely in place
2. The horizontal gripper slots in the housing are for when there is enough room to use the telescopic joint to push the tool into the window.
3. The vertical gripper slots in the housing are for when there is limited space to break the window and you must extend the arm and use the turret joint to push the tool left and right into the window.

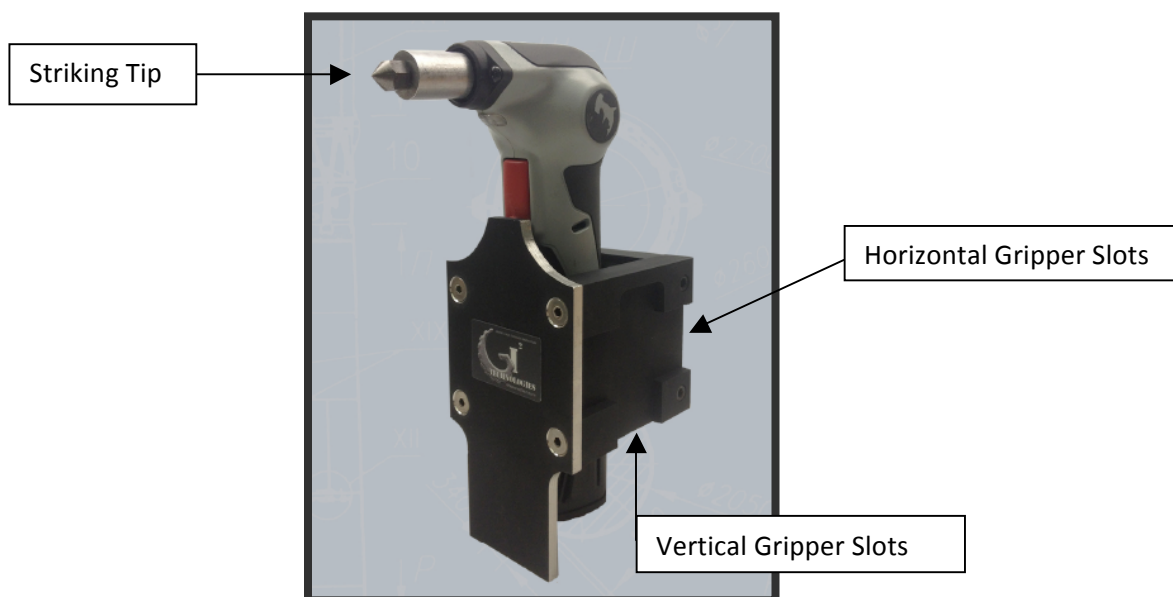

4. Once you have chosen the operational intent open the grippers up and place the tool between the open jaws in the orientation you have chosen
5. Close the grippers onto the housing
6. Insert the battery pack into the bottom of the tool
7. Push the tool away from the housing to release pressure on the switch and ensure that the system activates and ensure the battery is charged
8. Proceed down range to the target window
9. Push the device into the window making sure the tip hits the window first
10. The pressure applied to the window will automatically activate the tool and allow you to break the glass with minimal applied force
11. If the mission requires simply bring the gripper near the ground and open the jaws to release the tool down range
12. The tool will only use power from the battery when it is in contact with the glass and therefore should allow you to break many windows on a single charge